

095000-1030 Injector Orifice Plate 02# Technical File

SKU1: G1L320000000002

SKU2: G1F12950400200

SKU3: G1N12950400200

e







095000-1030 Injector Orifice Plate 02# Technical File

Content

1. 095000-1030 Injector Orifice Plate Introduction	2
1.1. 095000-1030 Injector Orifice Plate 02# Basic Information	
1.2. 095000-1030 Injector Orifice Plate 02# Common Part Number	2
1.3. 095000-1030 Injector Orifice Plate 02# Specifications and Dimensions	
1.4. 095000-1030 Injector Orifice Plate 02# Quality Control	2
1.5. 095000-1030 Injector Orifice Plate 02# Customized Service	2
1.6.095000-1030 Injector Orifice Plate 02# Packing List	4
1.7. 095000-1030 Injector Orifice Plate 02# Lettering Detail's Display	5
1.8.095000-1030 Injector Orifice Plate 02# Thickness Measurement Tool's Introduction	
1.9.095000-1030 Injector Orifice Plate 02# Thickness Measurement Methods	10
1.10. 095000-1030 Injector Orifice Plate 02# Warranty Instructions	12
1.11.095000-1030 Injector Orifice Plate 02# Manufacturer	13
2. 095000-1030 Injector Orifice Plate 02# Technical Support	13
2.1.095000-1030 Injector Orifice Plate 02# Inspection and Semi Ball Inspection	13
2.2.095000-1030 Injector Orifice Plate 02# Level of Damage Inspection	
2.3.095000-1030 Injector Orifice Plate 02# Installation Steps	18
2.4.095000-1030 Injector Orifice Plate 02# Technical Support Obtaining Methods	
3.095000-1030 Injector Orifice Plate 02# Purchase and Delivery	32
3.1.095000-1030 Injector Orifice Plate 02# Purchase Payment Methods	32
3.2.095000-1030 Injector Orifice Plate 02# Main Sales Markets	
3.3.095000-1030 Injector Orifice Plate 02# Declaration Requirements	33
3.4.095000-1030 Injector Orifice Plate 02# Shipping Ways	33
3.5.095000-1030 Injector Orifice Plate 02# Lead time	33
3.6.095000-1030 Injector Orifice Plate 02# Logistics Time for Destination Out of China's Areas	
3.7.095000-1030 Injector Orifice Plate 02# Packing	
4.095000-1030 Injector Orifice Plate 02# Storage Standard	34
5. Company Information	35
5.1. Company Introduction	36
5.2. Sales-men's Contact Information	36
6. Copyright Statement	36

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



095000-1030 Injector Orifice Plate 02# Technical File

1. 095000-1030 Injector Orifice Plate 02# Introduction

1.1. 095000-1030 Injector Orifice Plate 02# Basic Information

Title	China made new 095000-1030 fuel Injector Orifice Plate's 02#
SKU1	G1L32000000002
SKU2	G1F12950400200
SKU3	G1N12950400200

1.2. 095000-1030 Injector Orifice Plate 02# Common Part Number

(1) 095000-1030 Injector Orifice Plate 02# Application to Car Model Information

Injector Part Number	Car Model	OE Number	OE Number
095000-1030	HINO K13C	HINO 700S 12.9d	23910-1040

(2) 095000-1030 Injector Orifice Plate 02# Part Number Common Writing

02#, 2#, 02, 2, 295040-5070, 2950405070, 2950405070

1.3. 095000-1030 Injector Orifice Plate 02# Specifications and Dimensions

Injector Orifice Plate's Size: 2cm*2 cm *1 cm
Injector Orifice Plate's Box Size: 7cm *7 cm *2 cm
Injector Orifice Plate's Package Size: 8 cm * 8cm
Injector Orifice Plate's Net Weight: 0.015kg
Injector Orifice Plate's Gross Weight: 0.03kg

Injector Orifice Plate's Quality: China Made Brand New

MOQ: 4 Pieces

1.4. 095000-1030 Injector Orifice Plate 02# Quality Control

(1) 095000-1030 Injector Orifice Plate 02# Testing

All 095000-1030 injector orifice plate 02# parts are subjected to A-hole flow test, Z-hole flow test, precision test, high temperature test, low temperature test, pressure test, leakage test, durability test, and various working condition tests.

(2) 095000-1030 Injector Orifice Plate 02# Inspection

The factory inspection of 095000-1030 injector orifice plate 02# is undergone three inspections - full inspection, random inspection, and batch inspection. Different brands of test benches are used to test 095000-1030 injector orifice plate 02# for a total of no less than three times for factory inspection, and 095000-1030 injector orifice plate 02# installation testing environment are progressed in dust-free workshop.

1.5. 095000-1030 Injector Orifice Plate 02# Customized Service

(1) 095000-1030 Injector Orifice Plate 02# Customized Service Range:

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

Meet the OEM manufacturers customized demands of orifice plate's lettering, orifice plate's thickness, orifice plate's packing box, orifice plate's anti-rust bag and label etc,.

(2) 095000-1030 Injector Orifice Plate 02# Customized Items

No.	2700	250	-1	Show	21		SIP	557	277	2	90"	Show	-515
SHAMOTT'S SHAM	SI SIA!	Matt		16591		THE PARTY	S	Humar					7
Image	EL EVE	0		ON CONTRACT) :	STATE	g l		W	a C	1		
SATISTICAL SPAN	M ENG	-	10			Mar.	g			Α			
Name	Injector O	rifice Plat	e's Fror	nt Lette	ring	SECT.	1000	njector	Orifice	Plate's	Side L	etterir	ng
Description	Orifice pla	ite part n	umber:	02#	4.		41	-01	93	1		an.	90
No.	MIT NOW	THURS O	3	55	W.	1000	- 01	50	400	4	100V	7,50	15.0
Image	s¦um,	0-25mm 0.001m		W37	5 0 45	AT.	S	Matt			3		
Name		ctor Orifi				Dr.	OFF	400	9-Grid			03.90	100
Description	Injector o 4.02mm			kness ra	inge:	-		nt dama portation		ne orifi	ce pla	tes dur	ring
No.	57,777	519.57	5	5/12	519	300	alph.	39,500	697	6	6.500	SALE	3/1
Image	SHUMAT	T					SHL	JMATT					
Name	Neutral In Box	jector Or	ifice Pla	te's Ind	ividual	The same	Stylen	Orifice	Plate's	10pcs	Packir	ng Box	516
Description	Prevent d		the ori	fice plat	tes dur	ing	preve	orifice p	ge to th				ring
		-					transp	ortation	1				

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com



ant'i	SHUMATT	=HUMm11
Image		310 10 11 12
Name	Injector Orifice Plate's Individual Box	Orifice Plate's 12pcs Packing Box
Description	Liwei orifice plate's individual box	Greenpower orifice plate's 12PCS plastic box to prevent damage to the orifice plates during transportation
No.	9	10
Image	SHUMATT	SHUMATT
Name	Shumatt Orifice Plate's Box	Orifice Plate's VCI Anti-Rust Bag
Description	Shumatt orifice plate's plastic box to prevent damage to the orifice plates during transportation	9-grid orifice plate packaging box's blue VCI anti-rust bag, suitable for long-term storage of the orifice plate
No.	11 000	- 1 the state of t
Image	SHUMFITT TOPCE CHECK PLATE STREET STATE S	SHURKEL SHURKE
A PROPERTY AND	OFF THE THE THE PERSON THE PERSON THE	THE THE PERSON THE PER
Name	Shumatt Label	an an an an str
Description		<u> </u>

(3) 095000-1030 Injector Orifice Plate 02# Customized Service Requirements:

Custom lettering of injector orifice plate are not less than 100 pieces.

Custom packing boxes of injector orifice plate are not less than 100 pieces.

The purchase of injector orifice plates are not less than 100 pieces.

When customized products involve the need of specific logo, the OEM manufacturer has to provide trademark authorization and the sample of logo image file.

▲ Once the customized 095000-1030 injector orifice plate 02# is sold, it cannot be returned or exchanged if there is no quality problems.

1.6.095000-1030 Injector Orifice Plate 02# Packing List

(1) 095000-1030 Injector Orifice Plate 02# Spare Parts List

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com



No.	THE STATE OF THE PARTY STATE OF THE PARTY STATE	2
Image	SHUMATT	SHUMATT
SHATESTY SHAT		
Name	Injector Orifice Plate	9-Grid Box
Description	Orifice plate part number: 02#	9-grid plastic box to prevent damage to the orifice plates during transportation. (10pcs or 12pcs packing box is optional)
No.	DALL STREET, S	4
lmage	SHUMATT	SHUMATT
Name	Injector Orifice Plate's Individual Box	Neutral VCI Anti - Rust Bag
Description	To prevent damage to the orifice plates during transportation. (liwei individual box is optional)	24 24 24 24 24

▲ Minors are forbidden to use 095000-1030 injector orifice plate 02# and orifice plate's box to avoid personal injury.

▲ The orifice plate's plastic box is recyclable and can be reused.

▲ VCI anti-rust bag is non-degradable, please dispose them properly after using.

1.7. 095000-1030 Injector Orifice Plate 02# Lettering Detail's Display

(1) Orifice Plate's Lettering

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd





Pic No. 1

1: Oil Port Number	2: Grade Recognition Number	3: Manufacture Number	17 miles

(2) Orifice Plate's Structure



Pic No. 2

4: Oil Inlet	5: Stabilizing Pin	6: Front of Oil	7: Mark Location
Show Show Show	21/27 21/27 21/27 2	Back-flow Hole	21/201 21/201 21/2

(3) 095000-1030 Injector Orifice Plate 9# Liwei Orifice Plate's Multi-angle Pictures

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

6/38




Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

(4) 095000-1030 Injector Orifice Plate 02# Neutral Orifice Plate's Multi-angle Pictures

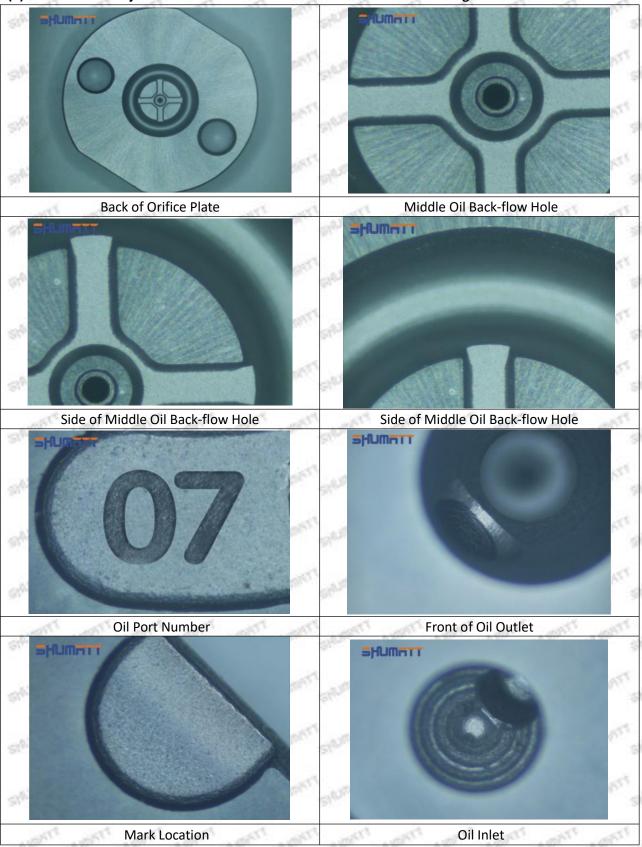

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



1.8.095000-1030 Injector Orifice Plate 02# Thickness Measurement Tool's Introduction

(1) Electronic Vernier Caliper


Technical Parameters

1. Made of stainless steel.

2. Resolution: 0.01mm/0.001.

3. Can set on zero at any location.

Parts' Name

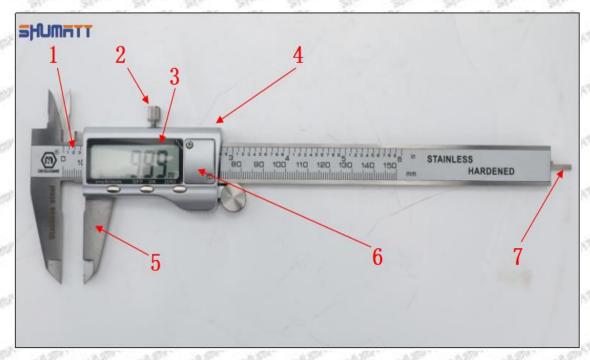

Pic No.1

1: Caliper Body	2: Caliper Frame Fastening Screw	3: LCD	4: Data Output Port
5: Data Output Port	6: Battery Cover	7: Depth Bar	/

(2) Electronic Digital Display Micrometer

Technical Parameters

1. Range: 0-25mm,25-50mm,50-75mm,75-100mm

2. Resolution: 0.001mm

3. Power: Voltage 1.5V button battery 4. Working Temperature: 0 \sim +40 °C 5. Storage Temperature: -20 \sim +70 °C 6. Environment Humidity: ≤80%

Parts' Name

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

9/38





Pic No.2

1: Micro-tube	2:Ratchet Force	3: Data Output	4: Display	5: mm Function
	Measuring Device	Port	Screen	Key
6: ON/OFF ZERO Function Key	THE TRUTT THE PARTY	STATE OF THE STATE OF	AND THE PARTY	AND SHAPET

1.9.095000-1030 Injector Orifice Plate 02# Thickness Measurement Methods

(1) Electronic Vernier Caliper

- Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;
- 2. Press the OFF/ON button on the vernier caliper to turn on the caliper;
- 3. When you turn on the vernier caliper, sometimes there is data on the screen. This is because the caliper is not fully closed. You can roll the caliper with fingers to close it, and then press the ZERO button to return to zero;
- Put the orifice plate into the caliper and press it tightly by rolling the button;
- 5. After tightening, use the other hand to tighten the upper button of the caliper to prevent looseness from affecting the accuracy of the reading. Last read the data.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com





Pic No.1

A Notice: When using the electronic vernier caliper, be sure to return on zero port, otherwise there will be a large error in the measurement results!

(2) Electronic Digital Display Micrometer

1. Preparation: Clean all surfaces of the caliper with a dry soft cloth, please make sure there is a battery in the caliper before using it;

2. Use of ON/OFF ZERO function key:

In the "off "state, short press the ON/OFF ZERO function key to start up, the micrometer is in the metric reading (shown on the right of the display "mm") mode and display the set value. If there is no set value, the initial value is displayed as "0".

In the power-on state, press and hold (more than 2 seconds) the ON/OFF ZERO function key to shut down.

In the power-on state, short press the ON/OFF ZERO function key, and the display returns to the set value or the initial value "0".

3. Use of "mm" function keys:

In the power-on state, short press the "mm" function key to realize the conversion of metric ("mm" is displayed on the right side of the display) and inch ("in" is displayed on the right side of the display) display mode.

In the power-on state, press and hold (more than 2 seconds) the "mm" function key to enter the setting value mode;

Setting of set value:

Long press (more than 2 seconds) the "mm" key to make the first character flash, and short press the ON/OFF ZERO key to select any number from 0 to 9;

Short press the "mm" key, and jump to the next character to flash, use the same method to select all the characters, press and hold (more than 2 seconds) the "mm" key to complete the preset value, then the character will no longer flash;

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

Once the setting value is set, it will last until the battery is removed or the battery is exhausted.

Data Transfer Method:

Open the data output port cover, insert the data acquisition line (need to be purchased separately) into the outer micrometer, and connect the other end to the company's data acquisition adapter (need to be purchased separately) or connect to the computer.



Pic No.2

1.10. 095000-1030 Injector Orifice Plate 02# Warranty Instructions

(1) . 095000-1030 Injector Orifice Plate 02# Warranty Conditions and Instructions

It is necessary to provide the pictures, videos of 095000-1030 injector orifice plate 02# when the injector orifice plate is abnormal during use or the test report of 095000-1030 injector orifice plate 02# inspection equipment as evidence to feedback to the salesman.

Abnormal conditions are properly explained such as: 1.Black smoke, 2. Engine shake, 3. Difficulty starting the engine, 4. Engine noise, 5. Oil leakage etc.

The above conditions may also be affected by incorrect installation of the fuel injector. If it is confirmed that it is product problem after being tested by our company, the injector orifice plate is within the scope of warranty.

(2) . 095000-1030 Injector Orifice Plate 02# Warranty Coverage

After customer receives the 095000-1030 injector orifice plate 02# within 15 days , customer can choose to replace it if there is a performance failure and the product has no appearance damage;

If the 095000-1030 injector orifice plate 02# has performance problems during the warranty period (3 months), and it is confirmed to be product's problems after being tested, you can contact our salesmen to replace the same model or a reworked product with the same performance for free;

If the injector orifice plate is confirmed to be fault-free, it can only be repaired and it will be returned as original way.

(3) . 095000-1030 Injector Orifice Plate 02# Out of Warranty Coverage

The 095000-1030 injector orifice plate 02# is artificially damaged due to assembly errors during the process of assembling.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com Website: www.shumatt.com

The warranty period has expired.

095000-1030 injector orifice plate 02# failure caused by high temperature, high pressure, humidity, rain and snow, saline-alkali land, earthquake, and used in abnormal environment.

095000-1030 injector orifice plate 02# damage caused by man-made reasons (throwing, strong magnetic field magnetization, set fire).

095000-1030 injector orifice plate 02# failure or injector damage caused by non-injector orifice plate's design, technology, manufacturing, quality and other issues.

1095000-1030 injector orifice plate 02# failure due to system pressure exceeding system approved pressure.

095000-1030 injector orifice plate 02# failure caused by impurities (water, lead, aluminum powder, iron powder, sulfide) in the system fuel exceeding the standard requirements.

095000-1030 injector orifice plate 02# failure caused by not installing according to the tightening torque specified in the vehicle engine maintenance manual (the tightening torque is too large or too small).

095000-1030 injector orifice plate 02# failure caused by not following the installation angle specified in the vehicle engine maintenance manual.

095000-1030 injector orifice plate 02# failure caused by not following the cleaning requirements specified in the vehicle engine maintenance manual.

095000-1030 injector orifice plate 02# failure caused by failure to replace consumable parts as specified in the vehicle engine maintenance manual.


1.11.095000-1030 Injector Orifice Plate 02# Manufacturer

Manufacturer: Shenzhen Shumatt Technology Co., Ltd

2. 095000-1030 Injector Orifice Plate 02# Technical Support

2.1.095000-1030 Injector Orifice Plate 02# Inspection and Semi Ball Inspection

(1) Magnify 500 times under the microscope to check whether there is indentation on the sealing surface and the oil outlet hole of the orifice plate, check whether there is wear, scratch, damage, rust, depression, semicircle in the center hole of the orifice plate.

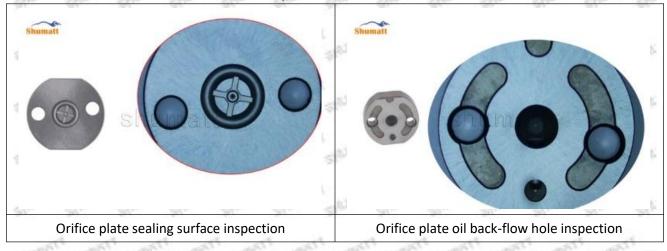

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

SHUMATT

Shenzhen Shumatt Technology Co., Ltd



Orifice plate center deviation inspection



There is indentation on the side, the orifice plate needs to be replaced



There is indentation in the middle oil back-flow hole, the orifice plate needs to be replaced



The middle oil back-flow hole is semicircular, the orifice plate needs to be replaced

Website: www.shumatt.com

⚠ The blockage of the oil back-flow hole will cause small volume of the oil return, and the oil will not be injected.

⚠ When oil back-flow hole becomes larger, it causes the semi ball to be not tightly sealed, which causes the fuel injection pressure cannot be established, then the fuel injector cannot work normally.

⚠ The wear on orifice plate's surface causes gap to the semi ball, which leads to large volume of oil return, in serious cases, the pressure can not be built up and nozzle will spray oil directly.

The blockage of the oil inlet hole (side hole) will cause small amount of oil return, the blockage of oil inlet side hole will cause the injector cannot build a pressure chamber, as a result, the injector cannot work normally.

(2) Magnified 500 times under the microscope, check the plane position of the semi ball, if there is any scratch, it is recommended to replace it.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com



2.2.095000-1030 Injector Orifice Plate 02# Level of Damage Inspection

(1) Slight Damaged



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

(2) Moderate Damaged



Wear marks on edge



The misalignment of the semi ball causes damage to the orifice plate when installing it



The wear of the middle oil back-flow hole causes gap between semi ball and orifice plate, and causes the orifice plate to be washed out by high-pressure oil

ģģ

/

(3) Highly Damaged



Obvious Wear marks on edge



The misalignment of the semi ball causes damage to the orifice plate when installing it

Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133

SHUMATT

Shenzhen Shumatt Technology Co., Ltd



The wear of the middle oil back-flow hole causes gap between semi ball and orifice plate, and causes the orifice plate to be washed out by high-pressure oil

/

(4) More Pictures of Orifice Plate's Damage Details



The misalignment of the semi ball



Marks of the misalignment of the semi ball



The indentation of the misalignment of the semi ball



Washout marks caused by the presence of impurities in the fuel


Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



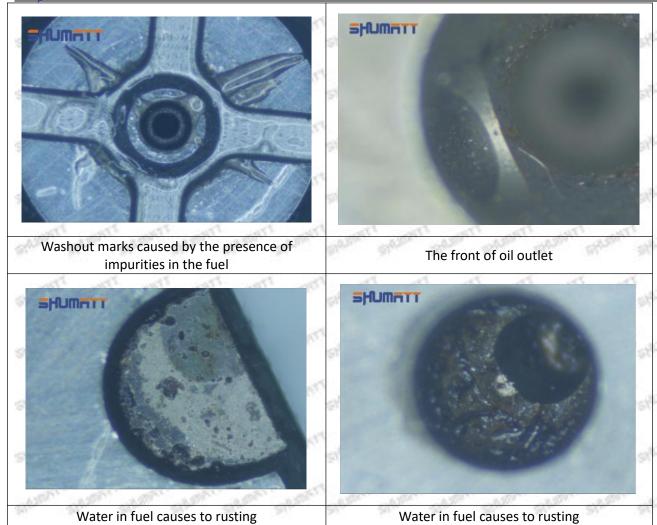

(5) Impact Classification According to The Degree of Damage to The Orifice Plate

Damage Type	Severe Damaged	General Damaged	Slight Damaged
Classification	Α	В	С
Impact on Overall Performance	Cause the fuel injector to not work properly, damage the vehicle engine or cause serious loss	Cause the injector cannot work normally, the vehicle cannot start normally, and the vehicle stop working	Cause Excessive oil return of injector and the vehicle engine shaking
Impact on Features	Affect the normal operation Affect the normal		Affect the fuel injection volume of the injector
Impact on Safety of Use	Cause serious damage to the engine and cause safety accident	Cause serious damage to the injector and may cause safety accident	Cause serious damage to the injectors and the vehicle stop working

2.3.095000-1030 Injector Orifice Plate 02# Installation Steps

(1) Before install 095000-1030 injector orifice plate 02#, clean it in an ultrasonic cleaning machine for 3-5 minutes so that to make the dirt, anti-rust oil oxide, paraffin base, naphthenic base, intermediate base, salt, lead naphthenate, zinc naphthenate, sodium petroleum sulfonate, barium petroleum sulfonate, calcium petroleum sulfonate, tallow diamine trioleate and rosin amine shedding fall off.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

18 / 38



- (2) Use compressed air to clean up the cleaning fluid attached to the surface of the cleaned orifice plate to meet the use standard.
- (3) When installing the orifice plate, install it according to the oil hole A on the orifice plate, and match A, B, C on the orifice plate with A, B, C on the injector house. See as Pic No. 1



Pic No. 1

(4) Put the orifice plate into the injector with the stabilizing pin inserted into the stabilizing hole, see as Pic



Pic No. 2

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Place the buffer lift measurement tool and dial gauge in the measuring tool (CRT220) at zero port for buffer stroke measurement, see as Pic No. 3



Pic No. 3

Buffer Stroke: When the solenoid valve is powered off, the spring force of the opened solenoid valve transfers to the center of the armature plate and drives the armature plate to go down. When the valve ball contacts the oil return hole in the center of the orifice plate, the oil back-flow hole is closed. However, the armature plate has to run down a certain distance under the inertia, and this distance is called the buffer stroke.

The normal range of the buffer stroke is 20-40 (um) microns.

(6) The measurement of buffer lift is in the normal range, within 20-40 (um) microns, see as Pic No. 4



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

20/38



Pic No. 4

A Notice: The buffer stroke is the distance between the plane A of the semi ball to the plane B of the lock nut. If it is lower than 20-40 (um) microns, grin the B plane to 20-40 (um) microns. If it is higher than 20-40 (um) microns, check worn parts and replace it.



Pic No. 5

(7) Install the air clearance lift measuring tool and dial gauge in the measuring tool (CRT220) and place it at zero port for air clearance measurement, see as Pic No. 6



Pic No. 6

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



Air clearance measurement normal range value is 45-50 (um) microns.

(8) The measurement of air clearance is in the normal range, within 45-50 (um) microns, see as Pic No. 7



Pic No. 7

A Notice: The air gap is the distance between plane A and plane B at the top of the armature, if the gap is not within 45-50 (um) microns, please replace it.



Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No. 8

(9) Install lock nut, see as Pic No. 9



Pic No. 9 (10) Install the (CRT230) 3-jaw tool inside the CRT029 on the lock nut, see as Pic No.10



Mob/WhatsApp: +86 13410541523 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



(11) Rotate (CRT084) clockwise with a torque wrench to tighten the lock nut to 70-75Nm, see as Pic No.11



Pic No.11

(12) When installing the semi ball, it should be noted that the plane of the semi ball cannot be reversed, otherwise it may cause damage to the orifice plate, see as Pic No.12



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No.12

(13) place the semi ball on the armature, Pic No.13



Pic No.13

(14) Put the armature with semi ball into the lock nut (Make sure that the armature buffer stroke and armature air clearance lift are within the normal range), see as Pic No.14



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Pic No.14

(15) Measure the thickness of the armature lift adjustment gasket, see as Pic No.15



Pic No.15

(16) Put the armature lift adjustment gasket into the solenoid valve, see as Pic No.16



Pic No.16

Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

Tel: +8675523215133



(17) Install the armature stroke measuring tool and dial gauge in the measuring tool (CRT220) and place it on zero to measure armature travel, see as Pic No.17



Pic No.17

The stroke of the armature also controls the final lifting position of the semi ball. The greater the stroke of the armature is lifted, the longer it will take for the return oil to rush in the orifice plate, which will cause the orifice plate to fail in a short time and the injector to fail to work normally. However, the stroke of the armature should not be too small, otherwise it will cause insufficient fuel injection, resulting in problems such as reduced engine power and engine shaking.

(18) The measurement of the solenoid valve's lift of the armature is 3.413, see as Pic No.18

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

27 / 38





Pic No.18 (19) Measure the armature travel of the injector housing end again, see as Pic No.19



Pic No.19

(20) Subtract the two data measured in step 17 and step 18 to get the normal range value of armature stroke between 60-65um. If the value is too large or too small, replace the armature lift according to the measurement results and adjust the thickness of the shim to make the armature stroke range reach the normal range, see as Pic No.20

28 / 38

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



Pic No.20

(21) Put the solenoid valve spring adjustment shim into the solenoid valve, see as Pic No.21



Pic No.21

(22) Put the solenoid valve spring into the solenoid valve, see as Pic No.22

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Website: www.shumatt.com

Email: ruby@shumatt.com



Pic No.22

(23) Install the solenoid valve sealing ring on the fuel injector, see as Pic No.23



Pic No.23

(24) Install the solenoid valve on the fuel injector, If the solenoid valve is not replaced, install it according to

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Website: www.shumatt.com

Email: ruby@shumatt.com

the red mark. If there is a replacement solenoid valve, install it according to the standard angle which checked on Truck book Parts EPC APP, see as Pic No.24



Pic No.24

(25) Tighten the solenoid valve clockwise with a torque wrench (CRT084) to 25-35Nm, see as Pic No.25



Pic No.25

(a) Leak Test

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133 Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd



Test Result:

1. The oil return is not sealed: there is no seal between the orifice plate and the semi ball.

May Lead To:

Oil return volume increased, oil leakage when the nozzle is in an open state, pressure cannot be established, and the injector fail to work, etc.

Solution:

Check or replace the orifice plate and Semi ball.

(b) VL Test

Test Result:

- 1. The maximum fuel injection volume is too large;
- 2. The maximum fuel injection volume is too small.

May Lead To:

- 1. The maximum fuel injection volume too large will cause the exhaust gas smoke and the fuel consumption will be high;
- 2. The maximum fuel injection volume too small will cause the engine powerlessness and delayed acceleration.

Solution:

- 1. When the maximum fuel injection volume is too large, make the armature stroke adjustment gasket or the solenoid valve spring adjustment gasket thin, and fine-tune the nozzle lift adjustment gasket;
- 2. When the maximum fuel injection volume is too small, make the armature stroke adjustment gasket or the solenoid valve spring adjustment gasket thick, and fine-tune the nozzle lift adjustment gasket.

2.4.095000-1030 Injector Orifice Plate 02# Technical Support Obtaining Methods

- (1) 095000-1030 Injector Orifice Plate 02# Technical File, visit http://shumatt.com to get the technical file.
- (2) Injector Technical Videos

Facebook: Visit https://www.facebook.com/hison.li to get the technical videos, constantly follow can get more information.

YouTube: https://www.youtube.com/channel/UCByvYBx7VjV mAfxh Hu-aw to get the technical videos, constantly follow can get more information.

Shumatt: Visit http://shumatt.com to get the technical videos.

(3) Injector Information Query Software

TruckBook Parts EPC APP, Android/Apple App Store download and install, visit http://shumatt.com to get the download and installation tutorial

(4) Search The fuel injector test data through TruckBook Parts EPC APP.

3.095000-1030 Injector Orifice Plate 02# Purchase and Delivery

3.1.095000-1030 Injector Orifice Plate 02# Purchase Payment Methods

Payment methods: T/T, PayPal, Alipay, WeChat

Please contact our salesmen for specific payment information.

3.2.095000-1030 Injector Orifice Plate 02# Main Sales Markets

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>

Injector orifice plate's main sales markets: Asia, Europe, North America, South America, Africa etc.

3.3.095000-1030 Injector Orifice Plate 02# Declaration Requirements

Shumatt can assist customers to provide the following documents for import customs clearance: contract, invoice, packing list, bill of lading, insurance policy, certificate of origin, etc.

3.4.095000-1030 Injector Orifice Plate 02# Shipping Ways

Destination in China areas: SF Express, Debon Express, the corresponding logistics company can be provided according to customer requirements in special cases.

Destinations out of China's areas: DHL, UPS, FedEx, TNT air, ocean or other shipping methods required by customers.

3.5.095000-1030 Injector Orifice Plate 02# Lead time

Lead time: Send out within 3 – 7 working days after receiving payment (Except for special products and special cases).

3.6.095000-1030 Injector Orifice Plate 02# Logistics Time for Destination Out of China's Areas **DHL Logistics Time:**

Country or Region of Departure	Hong Kong, China	Other Countries or Regions of Asia	Australia and New Zealand	Europe	America	Other Countries
China's Mainland	7 Days	7 Days	8 Days	8 Days	8-12 Days	7-10 Days

UPS Logistics Time: Country or Region of Departure: China's Mainland

Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time
Japan	3 Days	UK	5-7Days	Egypt	5-7 Days
Turkey	5-7 Days	Singapore	3 Days	Switzerland	5-7 Days
Bahrain	5-7 Days	Latvia	7-10 Days	New Zealand	7-10 Days
Sri Lanka	5-7 Days	Thailand	3 Days	Austria	5-7 Days
Romania	5-7 Days	Vietnam	3-5 Days	Estonia	5-7 Days
Malaysia	3-5 Days	Israel	5-7 Days	Mexico	7-10 Days
France	5-7 Days	America	5-7 Days	United Arab Emirates	5-7 Days
Italy	5-7 Days	Netherlands	5-7 Days	Bengal	7-10 Days
Lebanon	5-7 Days	Philippine	3-5 Days	Greece	7-10 Days
South Korea	3 Days	Spain	5-7 Days	Myanmar	5-7 Days
Canada	5-7 Days	Germany	5-7 Days	Saudi Arabia	7-10 Days
Portugal	5-7 Days	Australia	5-7 Days	South Africa	7-10 Days
Denmark	5-7 Days	Belgium	5-7 Days	Ukraine	7-10 Days
India	7-10 Days	Qatar	7-10 Days	Poland	5-7 Days
Indonesia	3-5 Days	Morocco	7-10 Days	Pakistan	7-10 Days
Kuwait	7-10 Days	2 Styles Styles	Bless Styles	all all all	SKy SK

The logistics time is for reference only, subjects are according to the actual arrival.

3.7.095000-1030 Injector Orifice Plate 02# Packing

Domestic express packaging: Usually wrapped in waterproof scotch tape, such as picture No.1.

Tel: +8675523215133 Mob/WhatsApp: +86 13410541523

Email: ruby@shumatt.com Website: www.shumatt.com

International express packaging: Wrapped with waterproof yellow tape After wrapping the black protective film, such as picture No. 2.

Pallet Shipping: Use fumigation free and recycling trays that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties for the outside, such as picture No. 3, also, the products can be packaged according to customers' requirements.

The packing tray is made of plastic and can be recycled.

A Transparent tape, yellow tape, black wrapping protective film, white wrapping protective film are non-degradable materials, please dispose of them properly.

A Minors are prohibited from using transparent tape, yellow tape, black wrapping protective film, and white wrapping protective film to avoid personal injury.



Pic No. 1

Domestic express packaging:

Wrapped with Transparent tape



Pic No. 3



Pic No. 2

International express packaging:

Wrapped with yellow tape after wrapping black protective film

Pallet Shipping: Use pallet that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties

4.095000-1030 Injector Orifice Plate 02# Storage Standard

(1) Choose a suitable storage place

Email: ruby@shumatt.com

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

© 2022 Shenzhen Shumatt Technology Co., Ltd

The warehouse and cargo yard where 095000-1030 injector orifice plate 02# is stored should be kept clean and dry, and away from the factory buildings that generate harmful gases and dust; do not mix with acid, alkali, salt and other substances; the storage place should have a good drainage system; the cargo yard should be flattened with gravel or furnace ash etc. to enhance the water permeability of the surface layer to keep the reservoir area dry.

(2) Strict requirements of warehousing

Strict inspections should be carried out when 095000-1030 injector orifice plate 02# are put into storage, the surface cleaning work should be done well to remove water traces, oil stains, ash and other dirt, remove the rust and do anti-rust treatment in time. Packaged injectors must be protected from damage.

(3) Keep the warehouse dry and preventing moisture

The relative humidity is usually below 70% for 095000-1030 injector orifice plate 02# placed in the room, and the corrosion of the injector orifice plate is significantly reduced.

Injector orifice plates must be stored in the warehouse, and they are forbidden to store in the same warehouse with commodities with high water content.

(4) Stack Properly

After 095000-1030 injector orifice plate 02# is exposed to rain, the corrosion rate will increase significantly. The purpose of sealing is to isolate the injector orifice plate from rainwater and humid air, so the warehouse window should be checked in time to avoid rainwater entering the warehouse

If the 095000-1030 injector orifice plate 02# package is damaged, it should be repaired or replaced; when the package is damp, the packaging material should be dried; if the original anti-corrosion and oil applied at the factory is found to be damaged or dried up, it should be cleaned and re-applied oil in time.

▲ It is forbidden to leave 095000-1030 injector orifice plate 02# exposed in the air for a long time.

▲ It is forbidden to store acid, alkali, salt and other substances together with 095000-1030 injector orifice plate 02#.

▲ The unpacked 095000-1030 injector orifice plate 02# must be rust-proof during secondary storage.

5. Company Information



Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com

© 2022 Shenzhen Shumatt Technology Co., Ltd

35 / 38

5.1. Company Introduction

Chinese Name: 深圳市舒马特科技有限公司

English Name: Shenzhen Shumatt Technology Co., Ltd

☐ Mob Phone/WeChat: +86-13410541523

☐ **HK Telephone**: +852-67653519

Telephone: +86-755-23215133

Email: ruby@shumatt.com

Website: www.shumatt.net

Shenzhen Office: 11-12, Floor 14, Building 13, Qinchengda Building, Exit A, Honglang North Subway Station, Bao'an District, Shenzhen, China's Mainland

Shenzhen Office: Room 428-430, Building B, Huafeng Zhigu Technology Industrial Park, Exit B, Fuyong Metro Station, Bao'an District, Shenzhen, China's Mainland

Hong Kong Office: Jianfa Street Industrial Zone, Tuen Mun, New Territories, Hong Kong, China

After-sales Service Address: Please contact our salesmen to obtain and provide the corresponding product maintenance reasons (Reference: 1.10. 095000-1030 Injector Orifice Plate 02# Warranty Instructions)

5.2. Sales-men's Contact Information

			Facebook	YouTube
Ruby	+86-13410541523	ruby@shumatt.com	Hison Li	Hison Li
lvy	+86-18025299821	sales@shumatt.com	Ivy Shumatt	Shumatt IVY
Rebecca	+86-18025349821	sales01@shumatt.com	Rebecca SHUMATT	SHUMATT Rebecc
Janny	+86-18028749821	sales02@shumatt.com	Janny shumatt	Janny Shumatt
Sam	+86-13316859821	Sales8@shumatt.com	Shumatt Sam	Sam Shumatt
Natalie	+86- 18938945856	sales15@shumatt.com	Shumatt Natalie	Lin Natalie
Ada	+86-1342286353	sales5@shumatt.com	Shumatt Ada	Ada Shumatt
Hison Li	+86-18318811871	web@shumatt.com	Hison Li	Hison Li
Mecca	+86-18938948618	sales11@shumatt.com	Shumatt Mecca	Shumatt Mecca
Eric	+86 18319033618	sales3@shumatt.com	24 Sh	51° 51'
Wayne (Joaquín en español)	+86-13316959821	wayne@shumatt.com	Shumatt Wayne	Wayne Shumatt
Sylvia	+86 18312499884	sales6@shumatt.com	1 100 mg	P. 100
35" 35" 3	Visit http://shumatt.com to ob	tain the latest information of salesi	men	210 210
	Ivy Rebecca Janny Sam Natalie Ada Hison Li Mecca Eric Wayne (Joaquín en español) Sylvia	Ivy +86-18025299821 Rebecca +86-18025349821 Janny +86-18028749821 Sam +86-13316859821 Natalie +86- 18938945856 Ada +86-1342286353 Hison Li +86-18318811871 Mecca +86-18938948618 Eric +86 18319033618 Wayne (Joaquín en español) +86-13316959821 Sylvia +86 18312499884	Ivy +86-18025299821 sales@shumatt.com Rebecca +86-18025349821 sales01@shumatt.com Janny +86-18028749821 sales02@shumatt.com Sam +86-13316859821 Sales8@shumatt.com Natalie +86-18938945856 sales15@shumatt.com Ada +86-1342286353 sales5@shumatt.com Hison Li +86-18318811871 web@shumatt.com Mecca +86-18938948618 sales11@shumatt.com Eric +86 18319033618 sales3@shumatt.com Wayne (Joaquín en español) +86-13316959821 wayne@shumatt.com Sylvia +86 18312499884 sales6@shumatt.com	Ivy +86-18025299821 sales@shumatt.com Ivy Shumatt Rebecca +86-18025349821 sales01@shumatt.com Rebecca SHUMATT Janny +86-18028749821 sales02@shumatt.com Janny shumatt Sam +86-13316859821 Sales8@shumatt.com Shumatt Sam Natalie +86-18938945856 sales15@shumatt.com Shumatt Natalie Ada +86-1342286353 sales5@shumatt.com Shumatt Ada Hison Li +86-18318811871 web@shumatt.com Hison Li Mecca +86-18938948618 sales11@shumatt.com Shumatt Mecca Eric +86 18319033618 sales3@shumatt.com Shumatt Wayne Wayne (Joaquín en español) +86-13316959821 wayne@shumatt.com Shumatt Wayne

6. Copyright Statement

The copyright of any contents (including but not limited to parameters, data, text, charts, images, sounds or videos, etc.) provided in "095000-1030 Injector Orifice Plate 02# Technical File" belongs to Shenzhen Shumatt Technology Co., Ltd. Without the prior written permission of Shenzhen Shumatt Technology Co., Ltd., any users are not allowed to modify the contents in "095000-1030 Injector Orifice

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: <u>ruby@shumatt.com</u> Website: <u>www.shumatt.com</u>



Plate 02# Technical File" in any way. At the same time, any conditions to spread, re-post, display the contents of "095000-1030 Injector Orifice Plate 02# Technical File" should indicate source from Shenzhen Shumatt Technology Co., Ltd., Any actions failure to follow above conditions to use "095000-1030 Injector Orifice Plate 02# Technical File" will violate the "Copyright Law of the People's Republic of China" and other laws and regulations and the provisions of relevant international conventions.

Mob/WhatsApp: +86 13410541523 Tel: +8675523215133

Email: ruby@shumatt.com
© 2022 Shenzhen Shumatt Technology Co., Ltd

<u>tt.com</u> Website : <u>www.shumatt.com</u>